

AD-PMI-LX3J

# Lexus (Joystick/small touchpad) connection diagram-first connection method

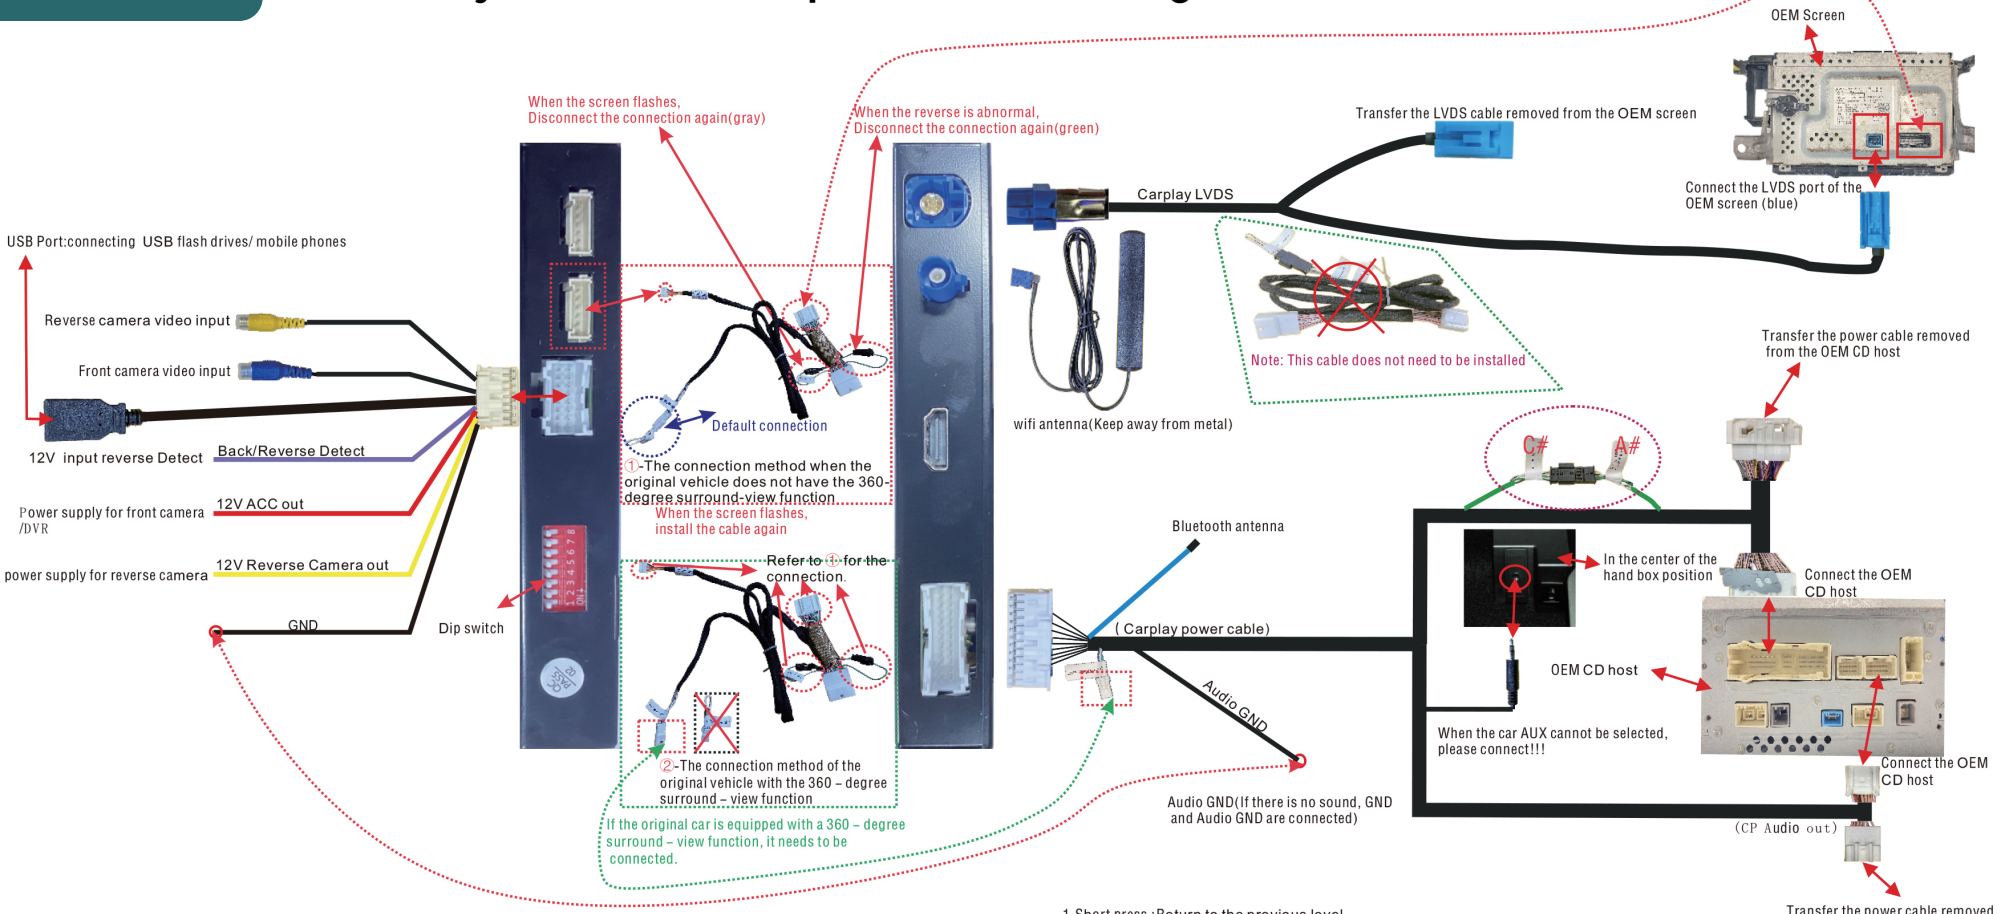



( Dip Switch)

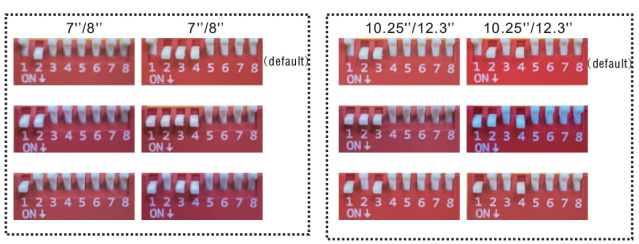


Note:
1.Remove the power cable of the box when replacing the DIP switch

1.Short press :Return to the previous level
2.Press and hold for 5 seconds:Enter the box system
3.Press and hold for 8 seconds:Reset box

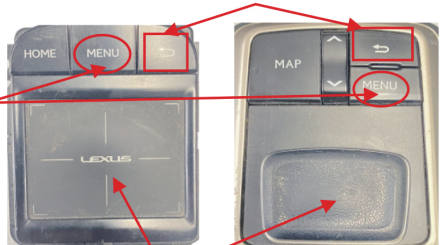


Press and hold for 3 seconds:Enter the box system

1.Short press :Confirm
2.Press and hold for 5 seconds:Activated speech
3.Control system:Slide left/slide right(Slide up/Slide down-page turning)


Last song/next song




Control system volume

1.Press and hold for 3:Answer calls or hang up

# AD-PMI-LX3J Lexus (Joystick/small touchpad) connection diagram-second connection method

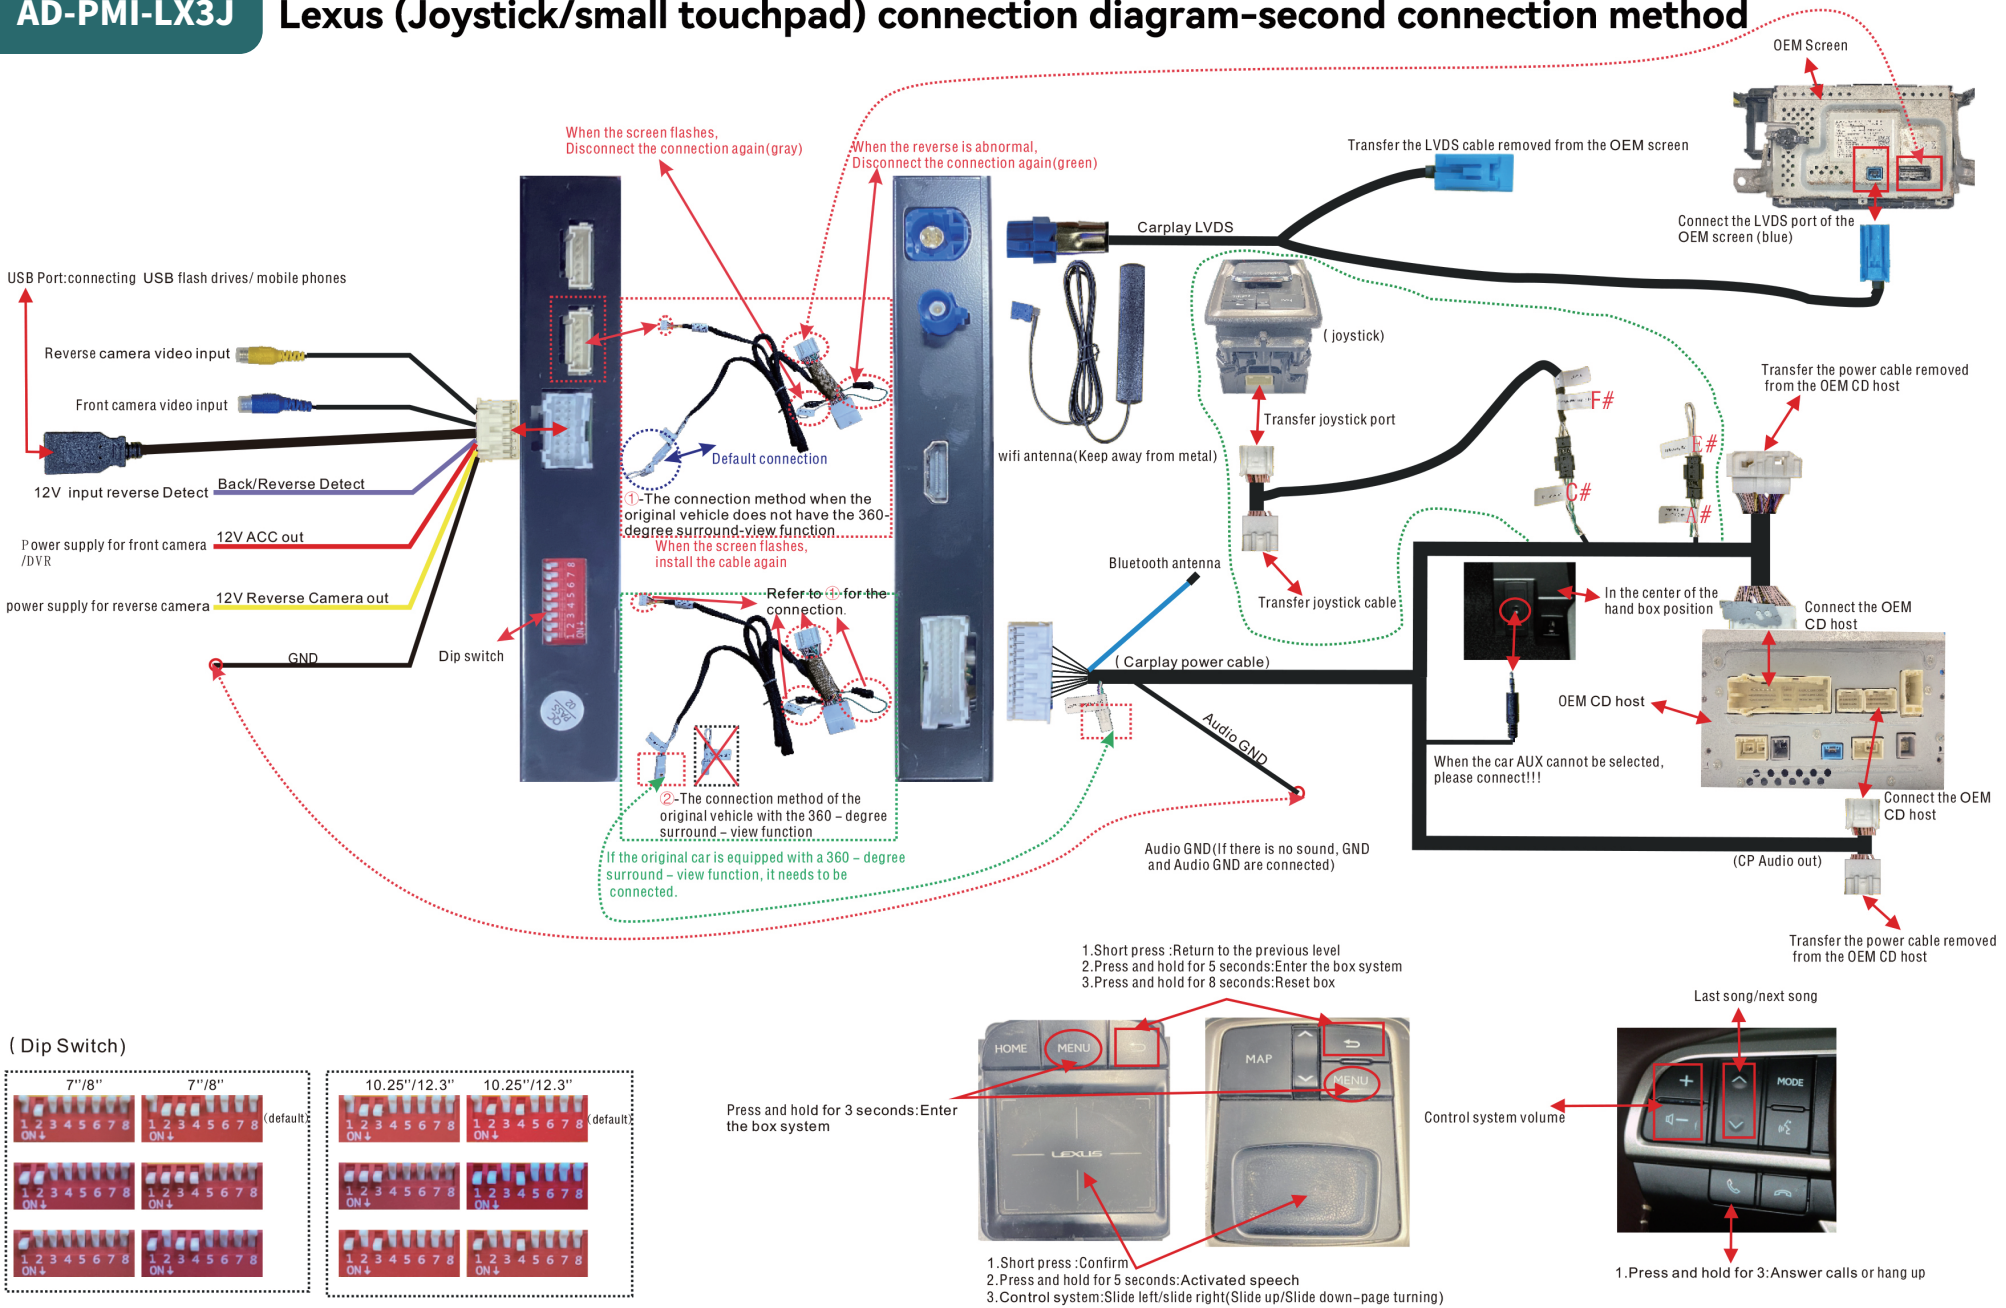


( Dip Switch)




Note:
1.Remove the power cable of the box when replacing the DIP switch

1.Short press :Return to the previous level
2.Press and hold for 5 seconds:Enter the box system
3.Press and hold for 8 seconds:Reset box




Press and hold for 3 seconds:Enter the box system

1.Short press :Confirm
2.Press and hold for 5 seconds:Activated speech
3.Control system:Slide left/slide right(Slide up/Slide down–page turning)

Last song/next song

Control system volume




1.Press and hold for 3:Answer calls or hang up