
AD-PMI-BM3J

CIC
Installation Diagram

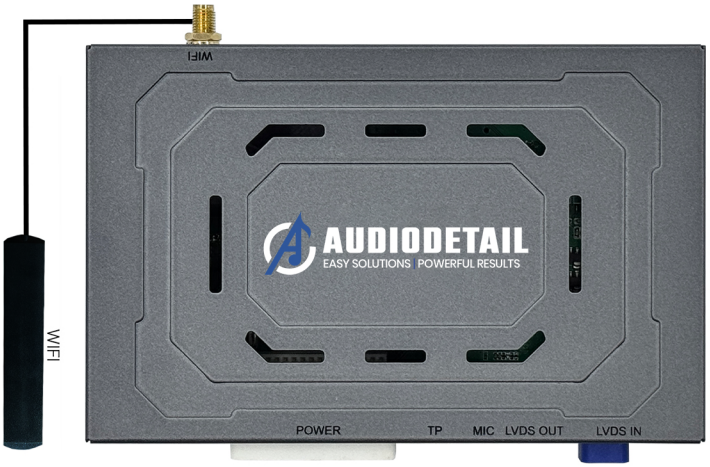




1 Swith(Long Press), Home
2 Knob
3 Return
4 Siri
5 Answer/Hang Up, Siri



360 ACC
REAR CAM 12V OUT
FRONT CAM 12V OUT
REVERSE 12V IN



AUX
USB
MIC
LVDS OUT
LVDS IN
OEM LVDS
FRONT CAM IN
REAR CAM IN
VIDEO IN
connect to OEM
connect to OEM

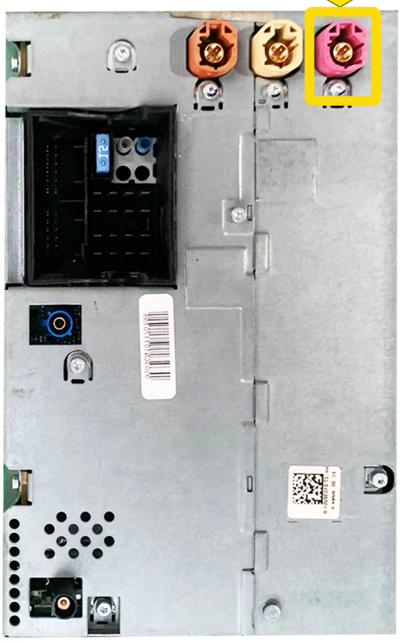

" OEM HOST "

DIP SETTING

See box label

Check DIP settings before installation.
Reconnect the white connector after DIP changes.

How to Connect Wireless Apple CarPlay


1,Long press switch button(different car with different switch button,check from installation diagram) to enter system main menu as below(BMW for example):



2, Then turn ON Wi-Fi from iphone's settings,you will find option of " WiFi-AP-**** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail"shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iphone will show Use CarPlay request)

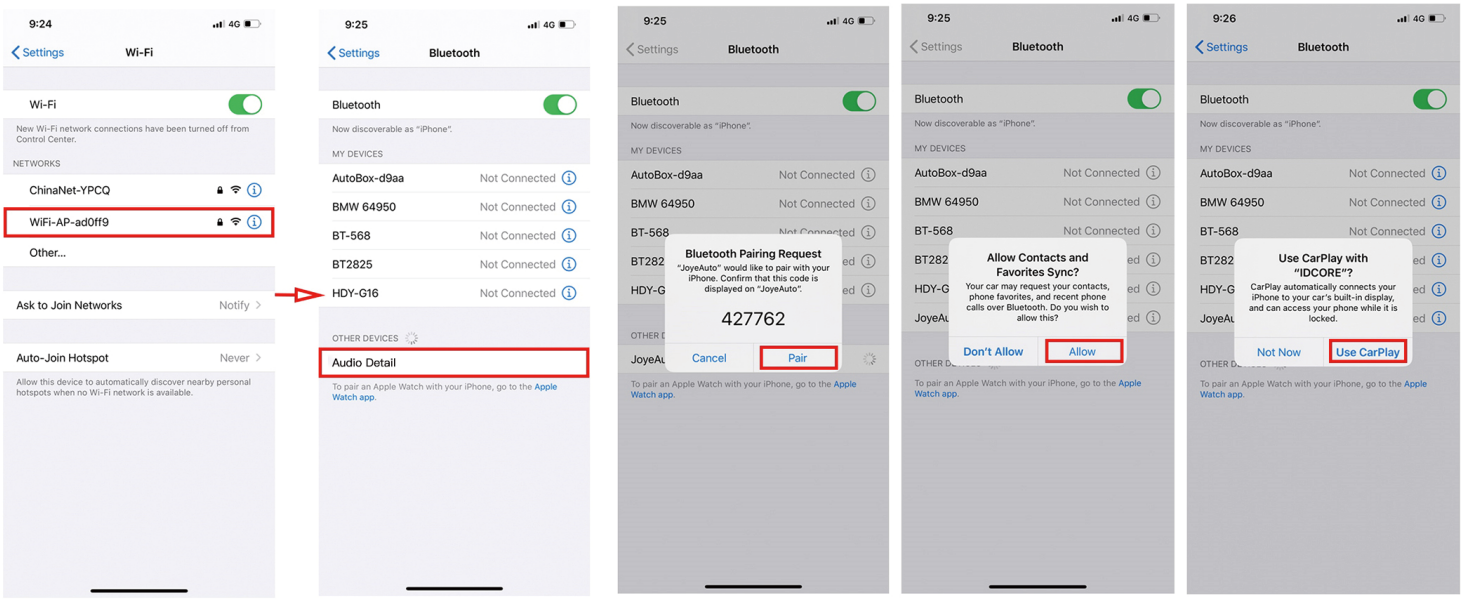

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying…

