
AD-PMI-DG1X

Jeep/Dodge/Chrysler Wireless CarPlay Installation Diagram

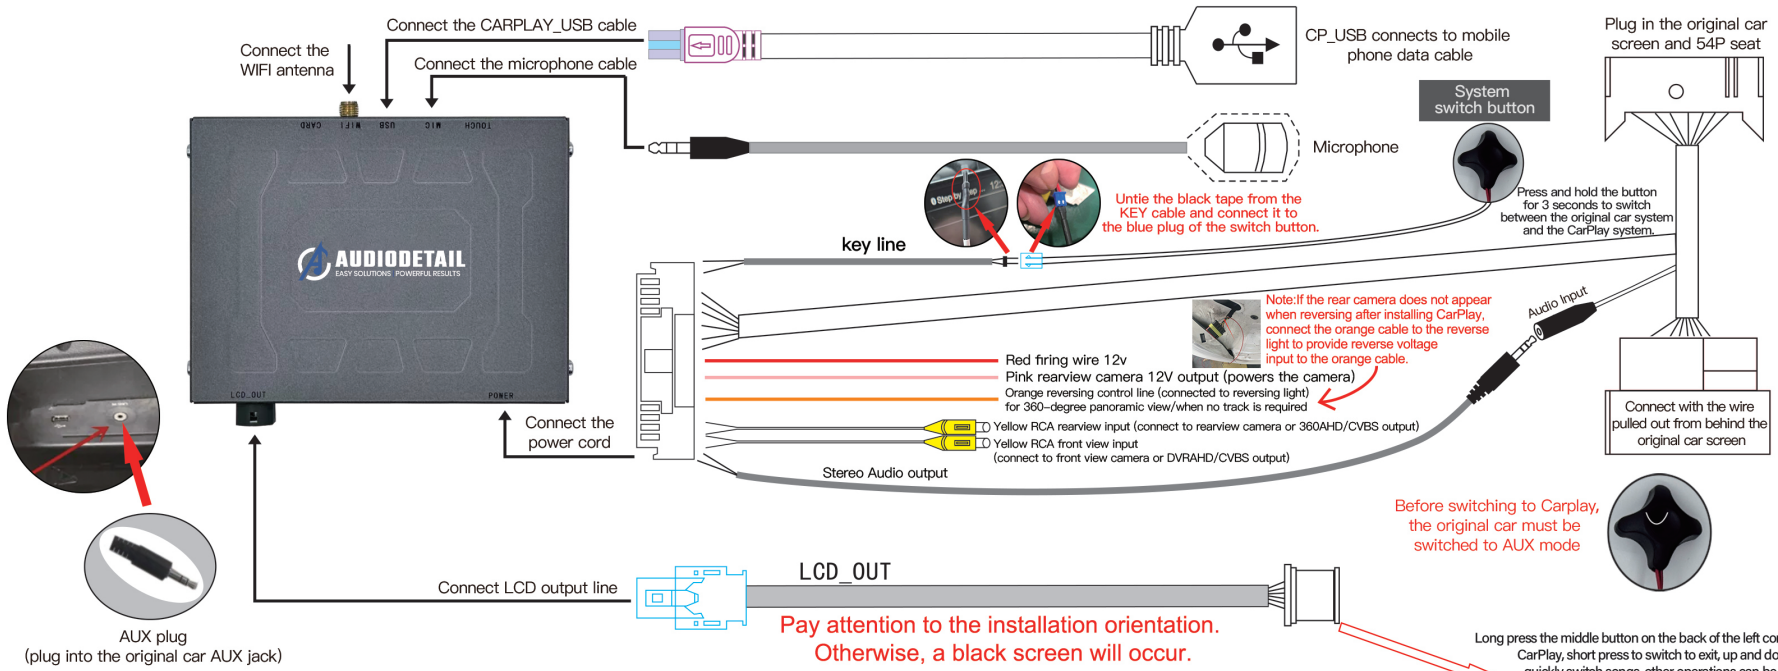


(Press the reset button/ power off after pulling the code to be effective)

Dip switch setting table


Dial 1	OFF/ON	Invalid/Invalid
Dial 2	OFF/ON	Invalid/touch calibration
Dial 3	OFF/ON	Invalid/Invalid
Dial 4	OFF/ON	Invalid/Invalid
Dial 5	OFF/ON	Invalid/Invalid
Dial 6	OFF/ON	Invalid/Invalid
Dial 7	OFF/ON	Invalid/Invalid
Dial 8	OFF/ON	Aftermarket Rear camera/Original Rear camera

Reset button DIP switch indicator light




(Note: after calibration, it is necessary to return to OFF state)

Note: If CarPlay Touch is unresponsive or insensitive, turn on DIP switch 2, then disconnect and reconnect the power cord. When the calibration crosshairs appear on the screen, tap the center of the crosshairs. Repeat this process until calibration is complete, then tap "OK". After calibration, return DIP switch 7 to its initial off position.

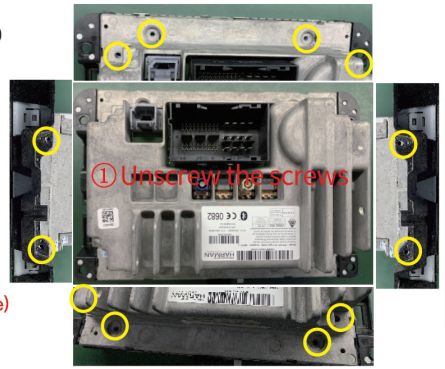



1. Remove the eight screws behind the screen and the four screws on the sides, remove the back cover and plug in the motherboard. There is one more screw to remove on the bottom of the motherboard (see the diagram for the specific location). After removing a total of 13 screws, remove the middle cover to access the screen and touchscreen cables to be connected.

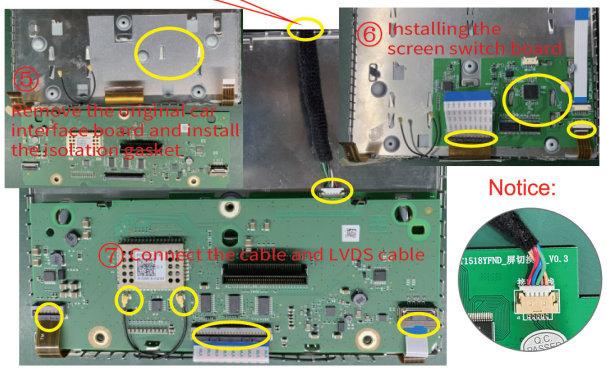

2. Remove the original car screen cable, antenna and original car interface board, install the additional isolation gasket and screen adapter board, connect the original car screen 60P screen cable and 8P touch cable, restore the original car interface board installation and the original car cable, antenna and added screen cable and touch cable (pay attention to the money (note that the docking seat must be parallel to the buckle and locked), install the LVDS line, and the outlet position) check all interfaces and restore the original car rear cover

How to Connect Wireless Apple CarPlay


1,Long press switch button(different car with different switch button,check from installation diagram) to enter system main menu as below(BMW for example):



2, Then turn ON Wi-Fi from iphone's settings,you will find option of " WiFi-AP-**** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail"shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iphone will show Use CarPlay request)

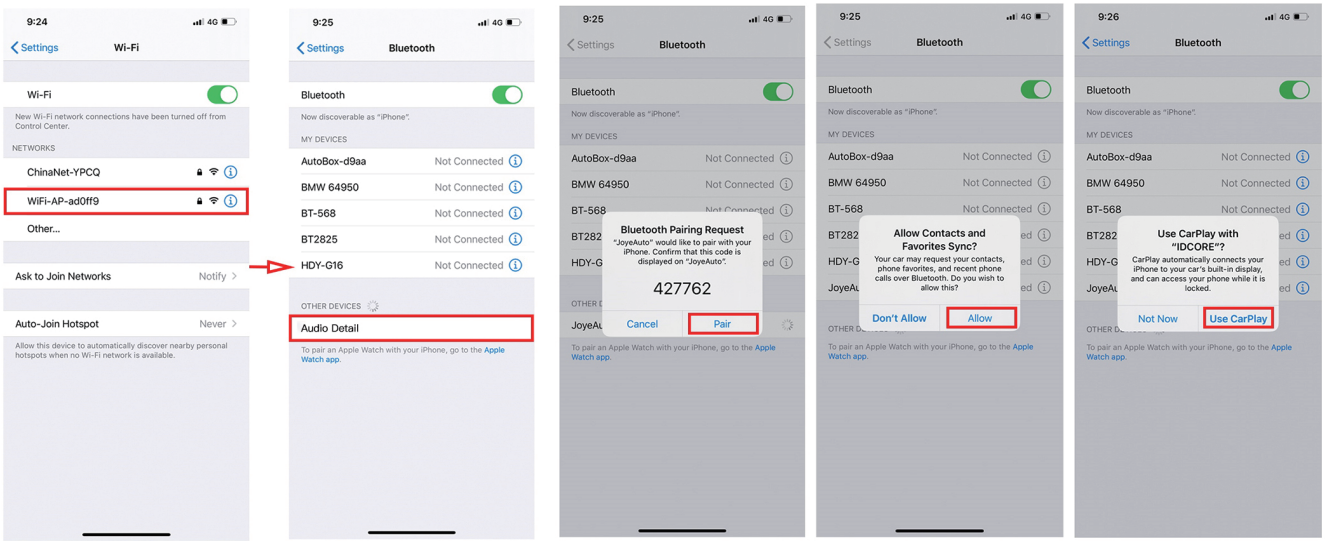

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

