AD-PMI-LR1J

LR/JAG Harman Installation Diagram





Notes:
①: HOME: Entry to Module System;
①: call: Entry to Module System;



Notes:
②: Prev;
③: Next;



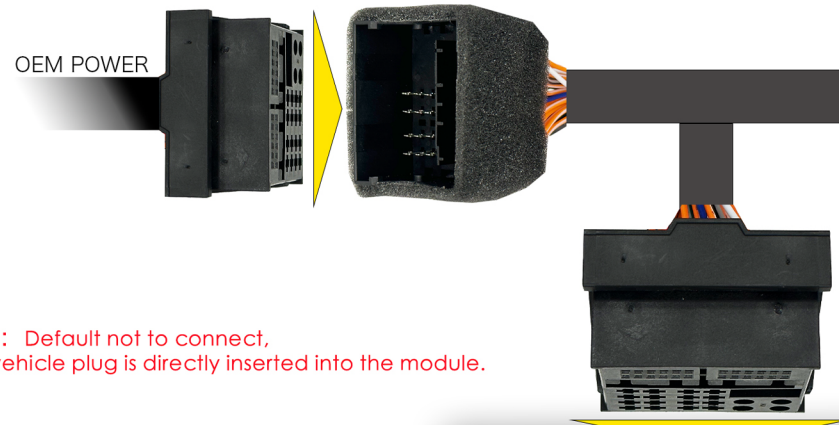


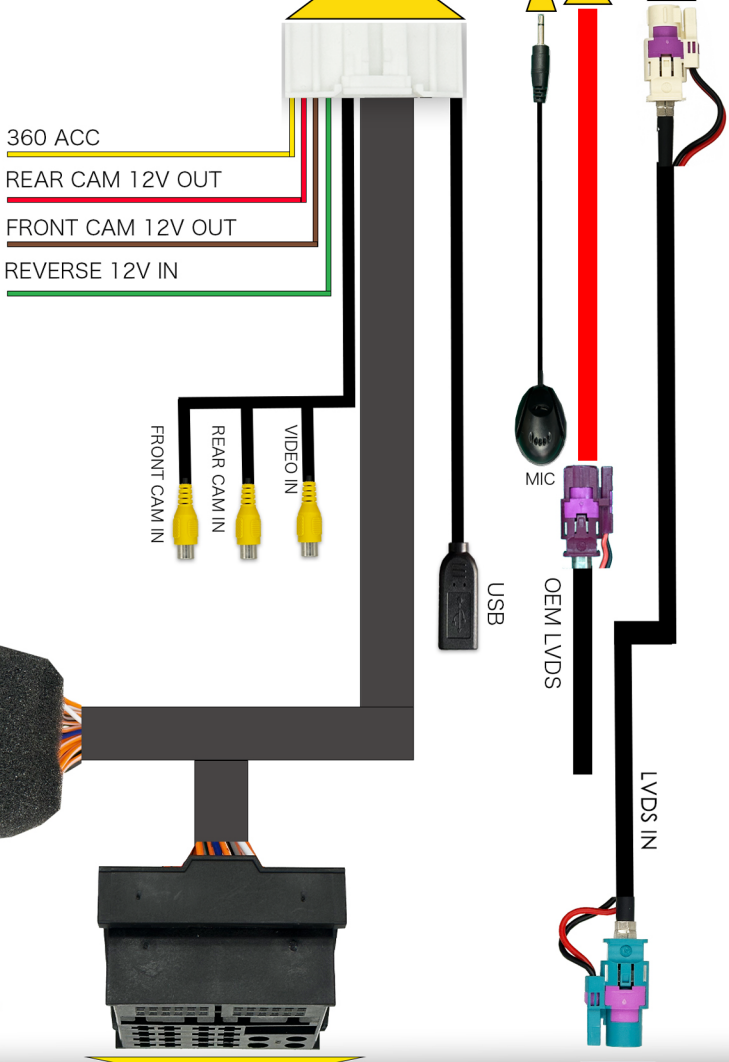

LVDS OUT : Default not to connect,
the original vehicle plug is directly inserted into the module.

DIP SETTING

See box label

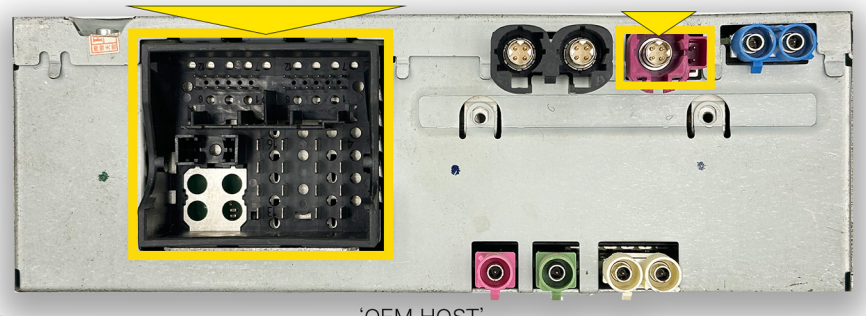

'OEM HOST'

Check DIP settings before installation.
Reconnect the white connector after DIP changes.

How to Connect Wireless Apple CarPlay


1,Long press switch button(different car with different switch button,check from installation diagram) to enter system main menu as below(BMW for example):



2, Then turn ON Wi-Fi from iphone's settings,you will find option of " WiFi-AP-**** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail"shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iphone will show Use CarPlay request)

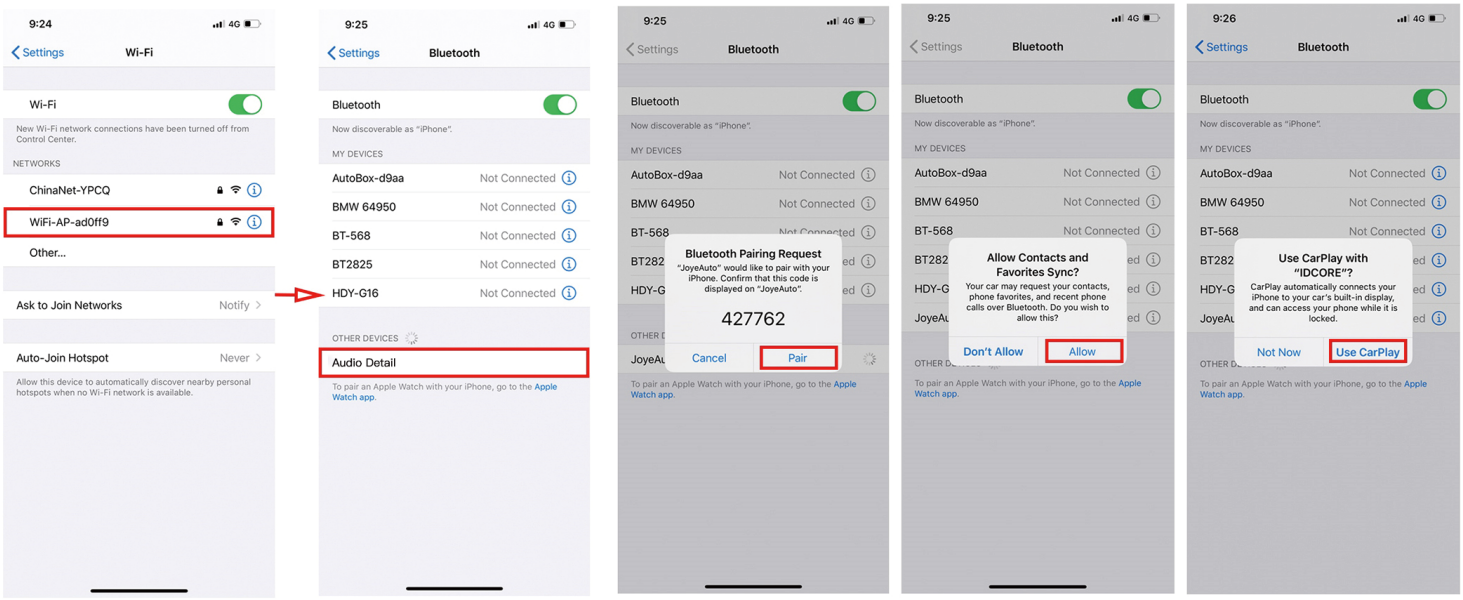

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying…

