
AD-PMI-LR2J

LR/JAG BOSCH Installation Diagram

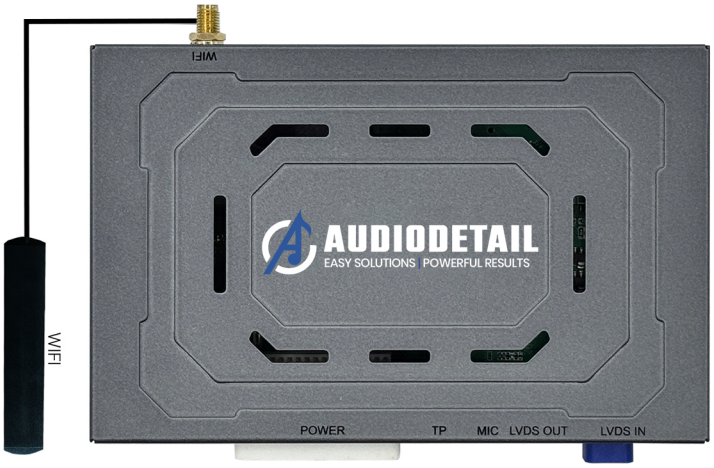



Notes:

①:NAV:Entry to Module System;


②:HOME MENU: Return to OEM ;


③:PHONE:Answer or Hand up;

④:Prev;

⑤:Next;

⑥:MODE:OK Knob; Some as OEM

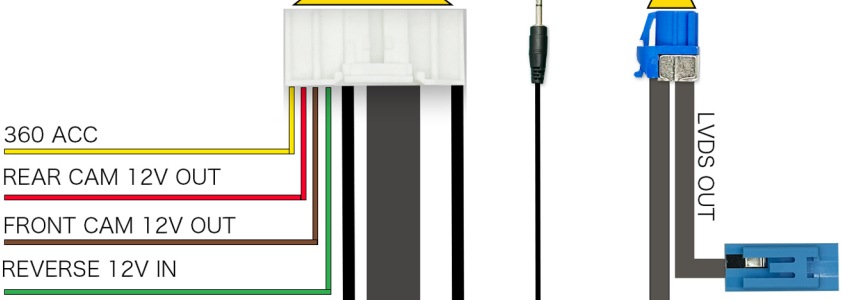

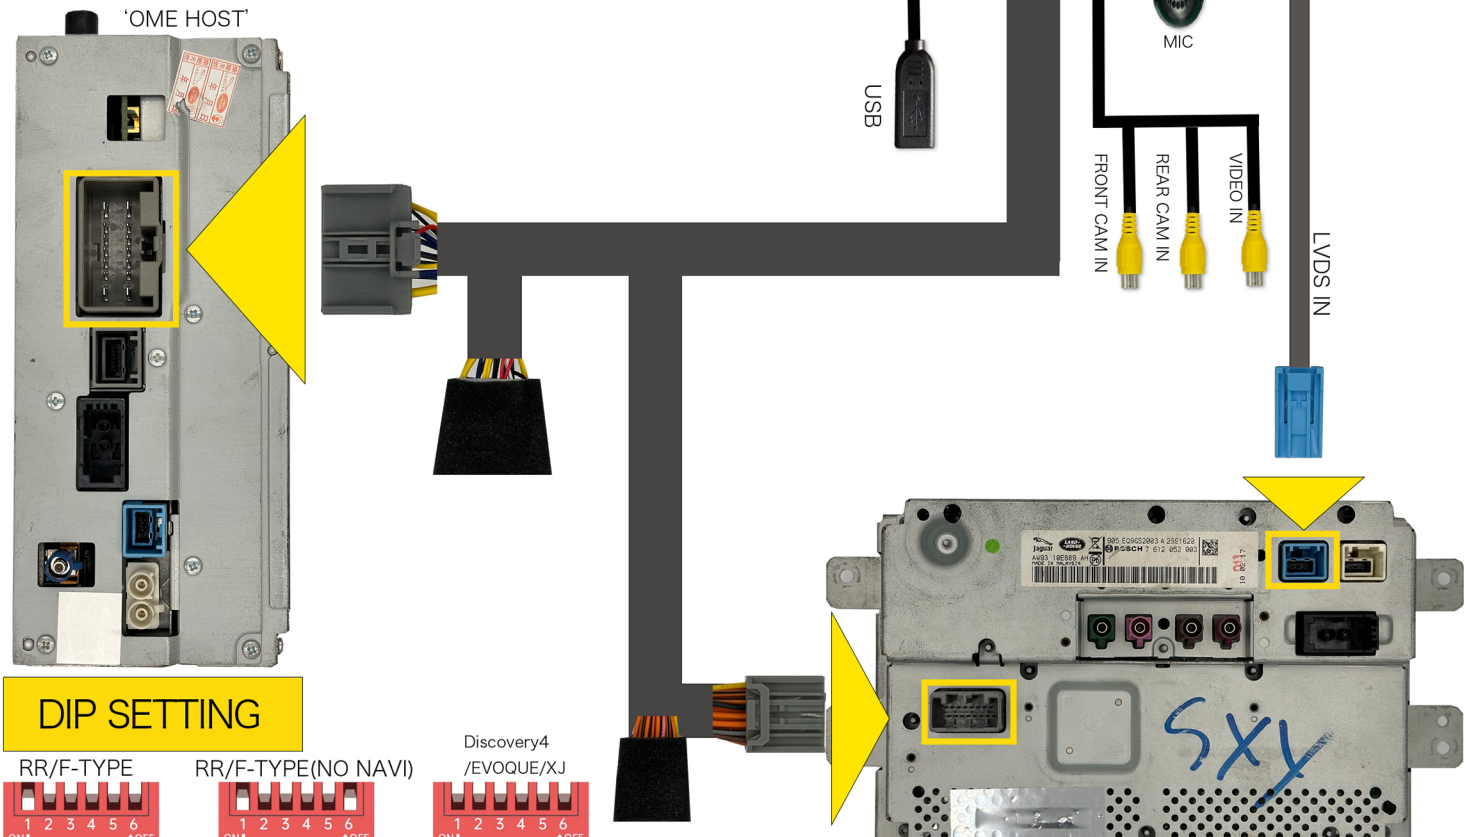

DIP SETTING

RR/F-TYPE


RR/F-TYPE(NO NAVI)

Discovery4 /EVOQUE/XJ

Discovery4 /EVOQUE/XJ(NO NAVI)



XF



XF(NO NAVI)



Check DIP settings before installation.
Reconnect the white connector after DIP changes.

How to Connect Wireless Apple CarPlay


1,Long press switch button(different car with different switch button,check from installation diagram) to enter system main menu as below(BMW for example):



2, Then turn ON Wi-Fi from iphone's settings,you will find option of " WiFi-AP-**** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail"shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iphone will show Use CarPlay request)

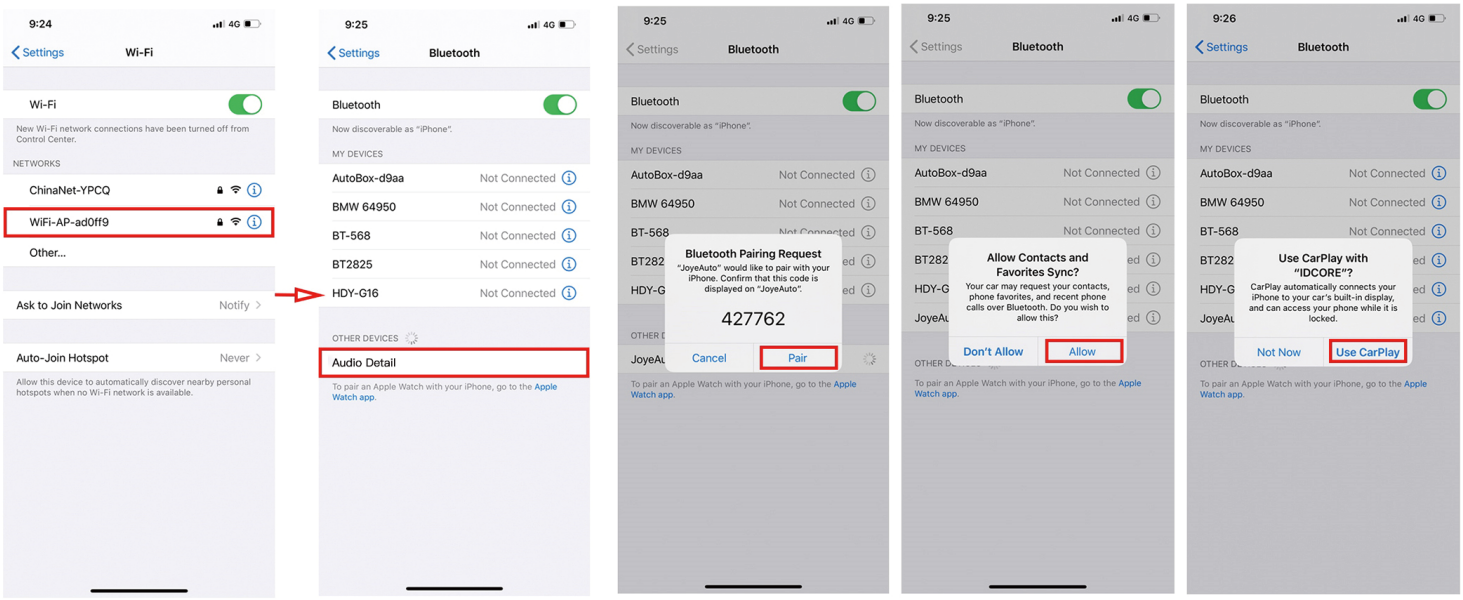

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying…

