




Porsche PCM3.1 Wireless CarPlay Installation Diagram

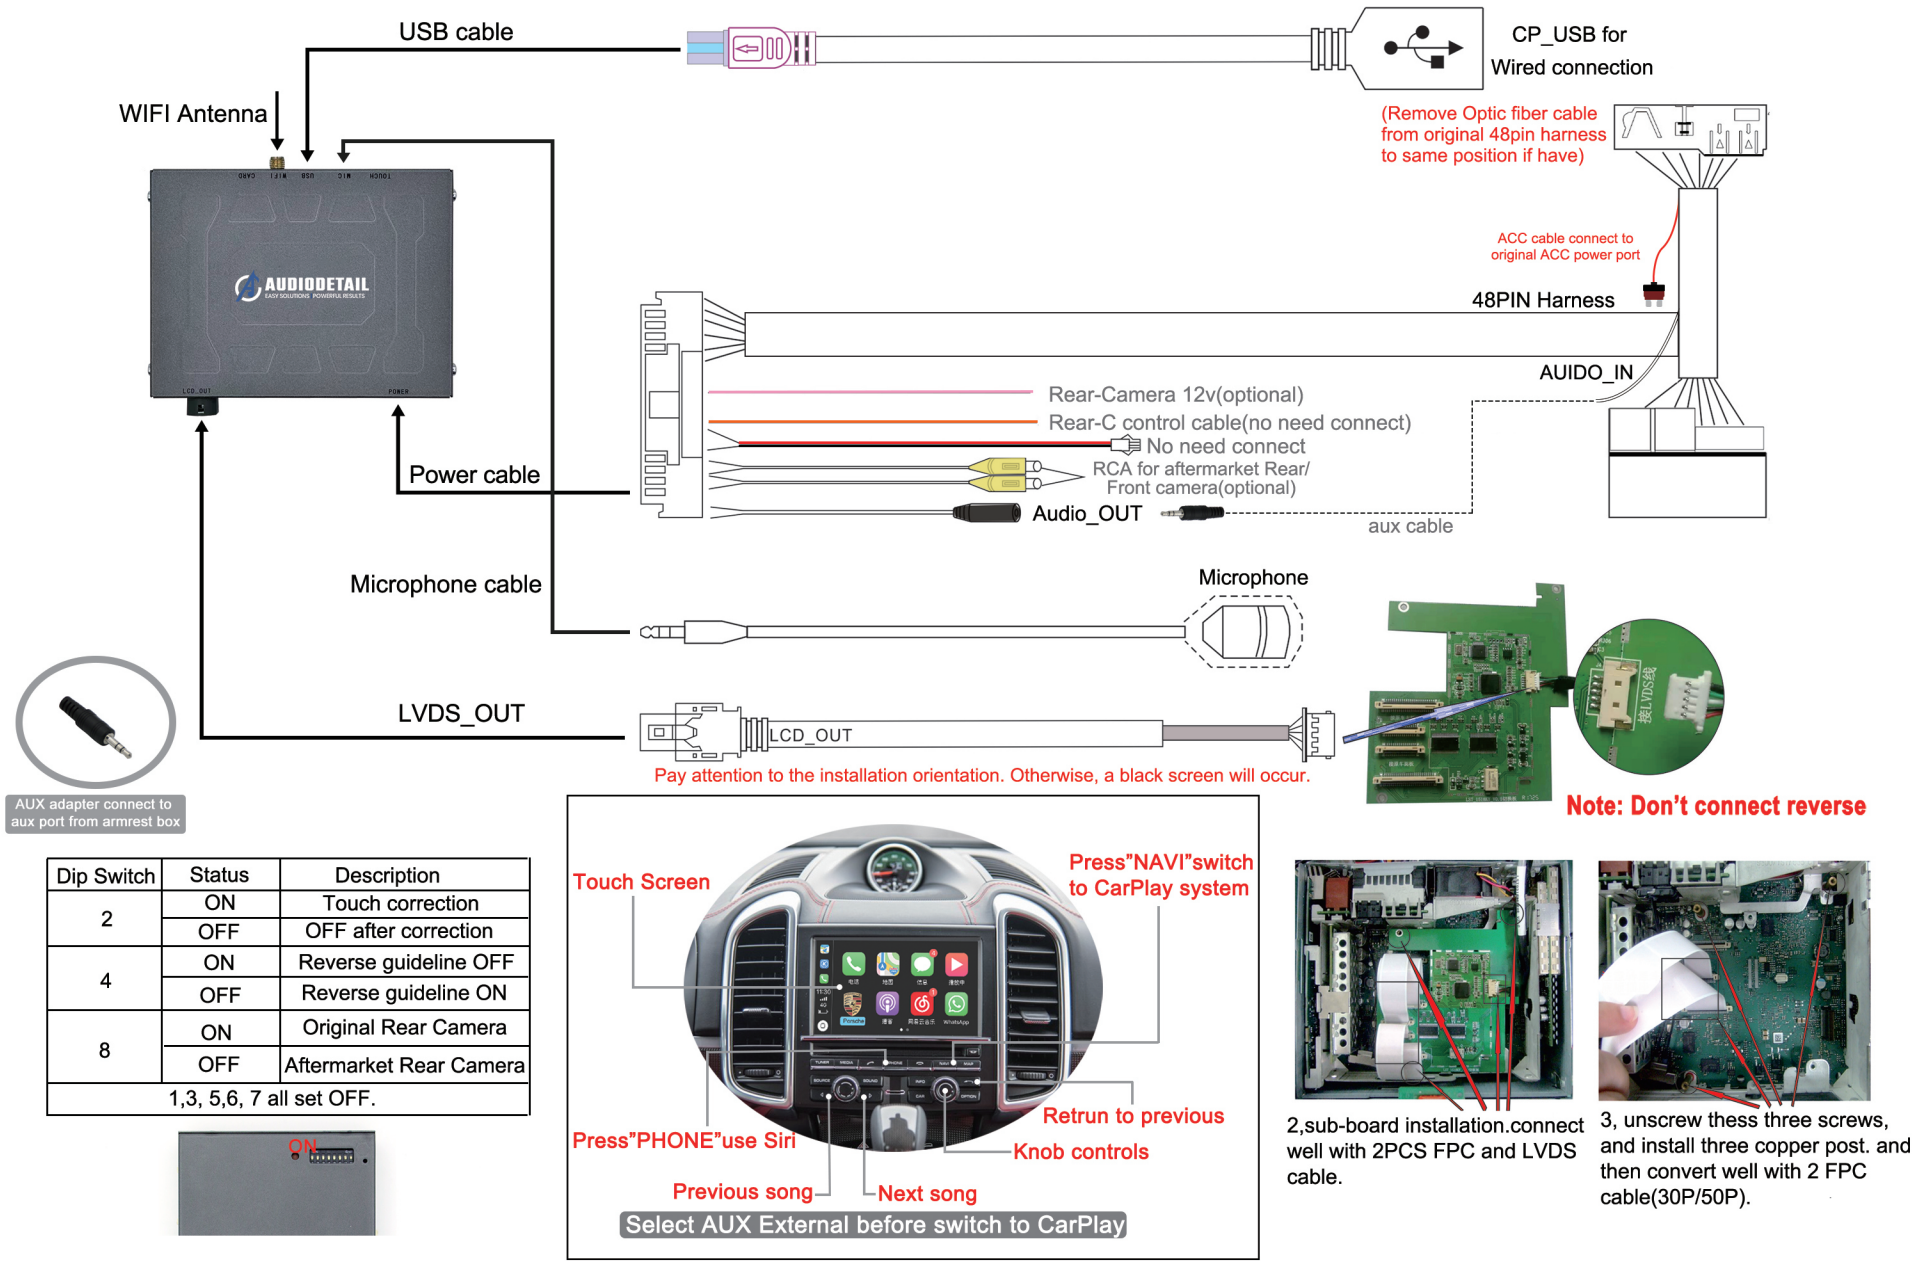

Dip Switch	Status	Description
2	ON	Touch correction
	OFF	OFF after correction
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear Camera
	OFF	Aftermarket Rear Camera
1,3, 5,6, 7 all set OFF.		

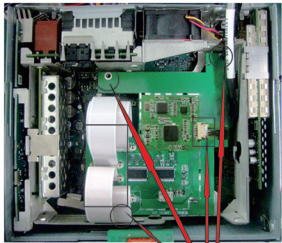

2,sub-board installation.connect well with 2PCS FPC and LVDS cable.

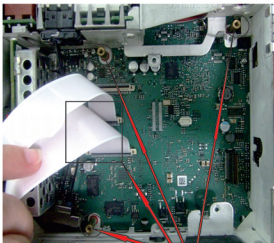

3, unscrew thess three screws, and install three copper post. and then convert well with 2 FPC cable(30P/50P).


How to Connect Wireless Apple CarPlay

1, Long press switch button (different car with different switch button, check from installation diagram) to enter system main menu as below (BMW for example):



2, Then turn ON Wi-Fi from iPhone's settings, you will find option of "WiFi-AP-****", but DO NOT need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection (Note: If "Audio Detail" shows connected, but didn't go to CarPlay, then click Setup -> Bluetooth -> Paired device -> WiFi CarPlay then iPhone will show Use CarPlay request)

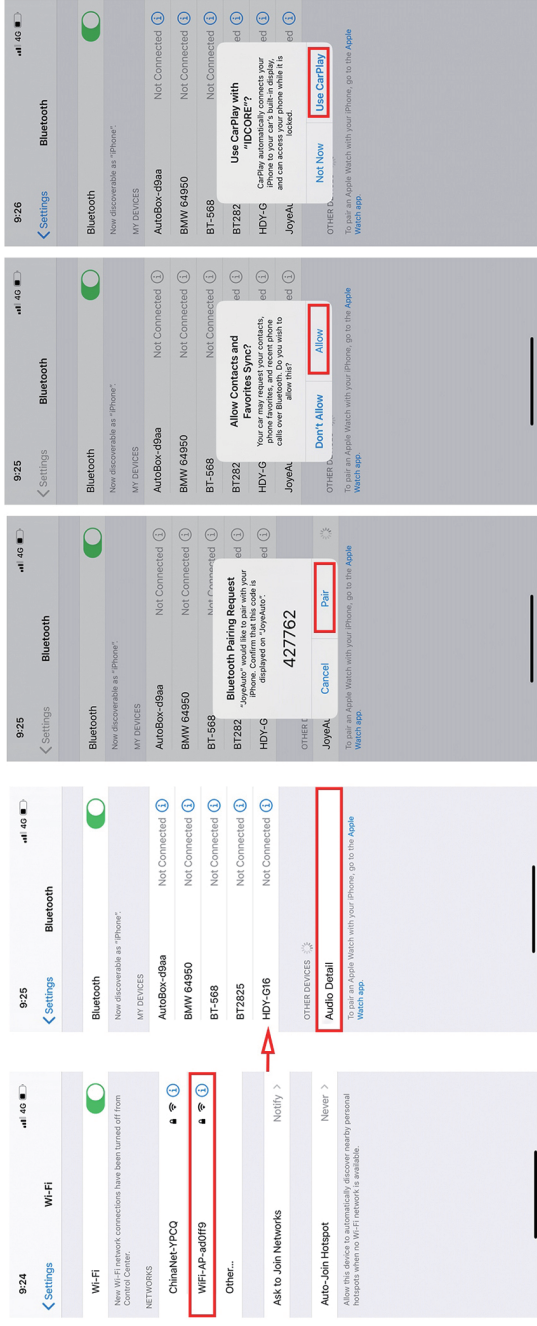

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

