

Volvo Installation Diagram




- 1 Volt+ or Vol-
- 2 Long Press (Home)

Note: This power adapter cable is located underneath the steering wheel.



360 ACC
REAR CAM 12V OUT
FRONT CAM 12V OUT
REVERSE 12V IN

FRONT CAM IN
REAR CAM IN
VIDEO IN

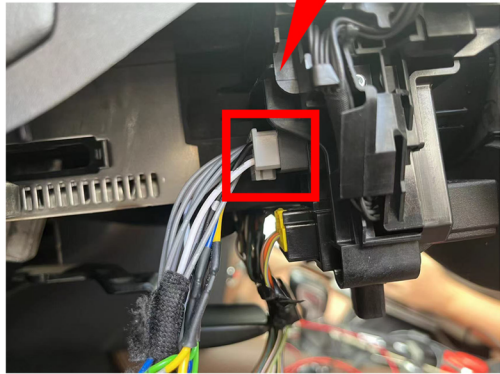


DIP SETTING



See box label



Check DIP settings before installation.
Reconnect the white connector after DIP changes.

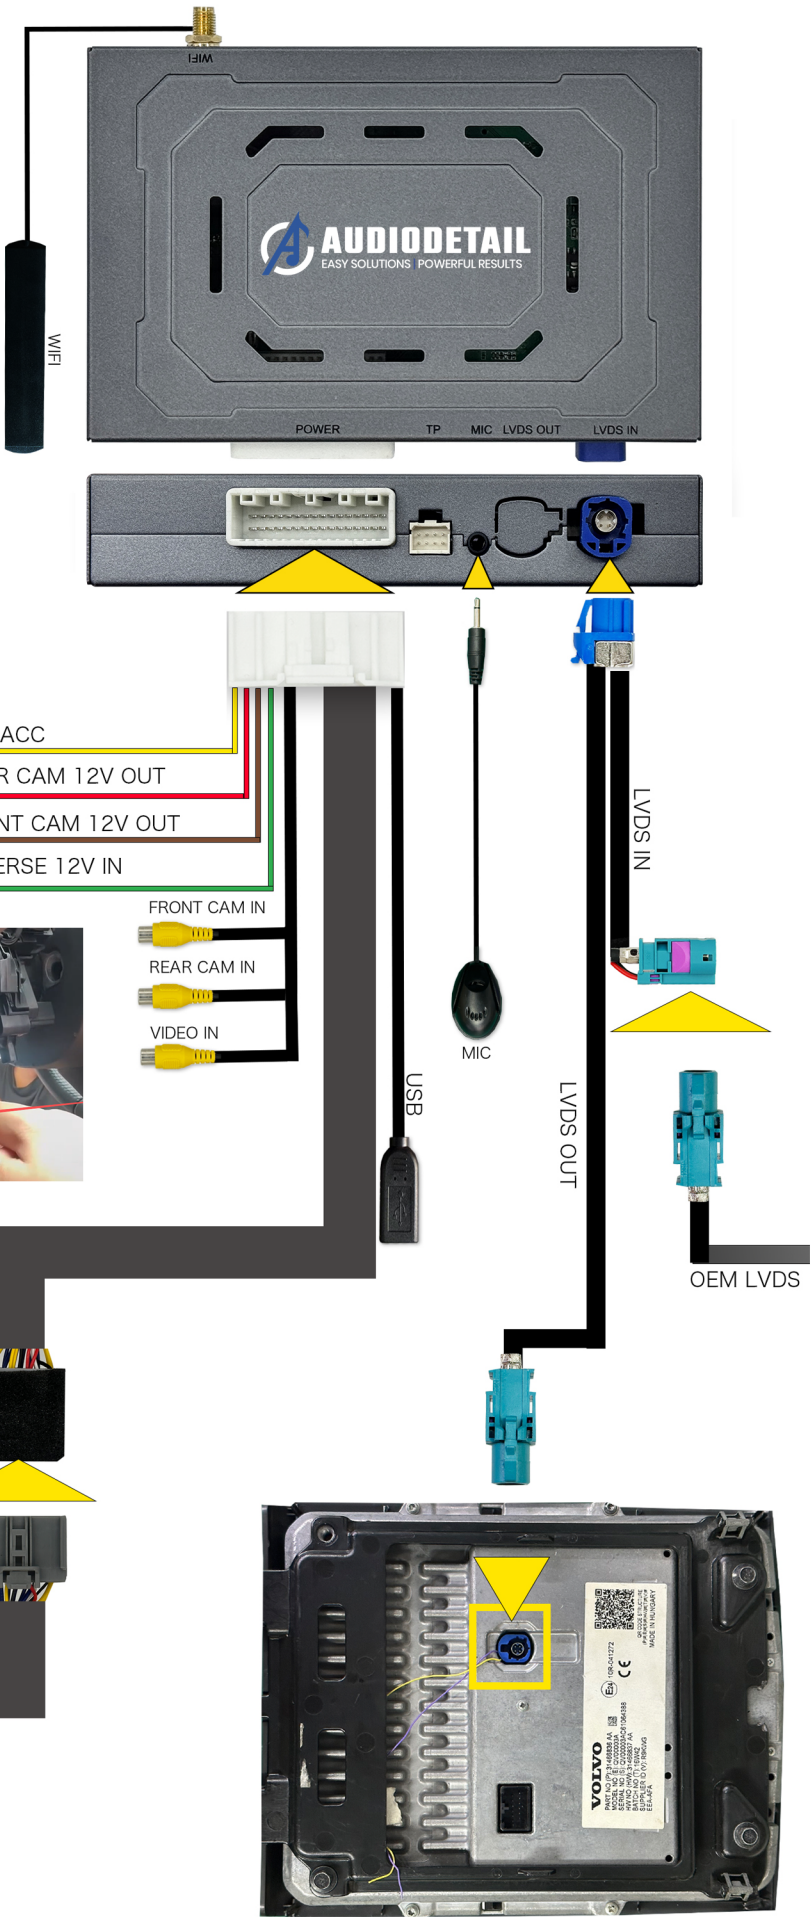

“OEM SCREEN”

How to Connect Wireless Apple CarPlay


1, Long press switch button (different car with different switch button, check from installation diagram) to enter system main menu as below (BMW for example):



2, Then turn ON Wi-Fi from iPhone's settings, you will find option of "WiFi-AP-****", but DO NOT connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail" shows connected, but didn't go to carplay, then click Setup -> Bluetooth -> Paired device -> WiFi CarPlay then iPhone will show Use CarPlay request)

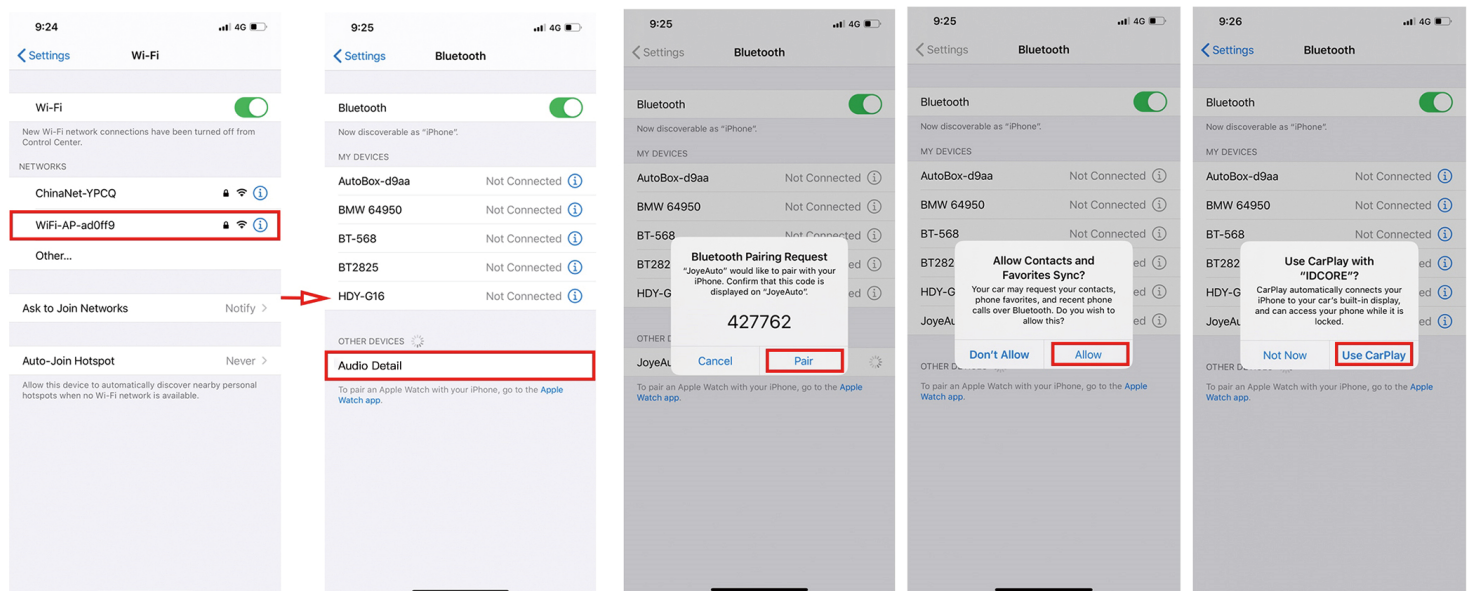

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

