

AD-PMI-VW1X


VW Touareg 6.5” Wireless CarPlay Installation Diagram

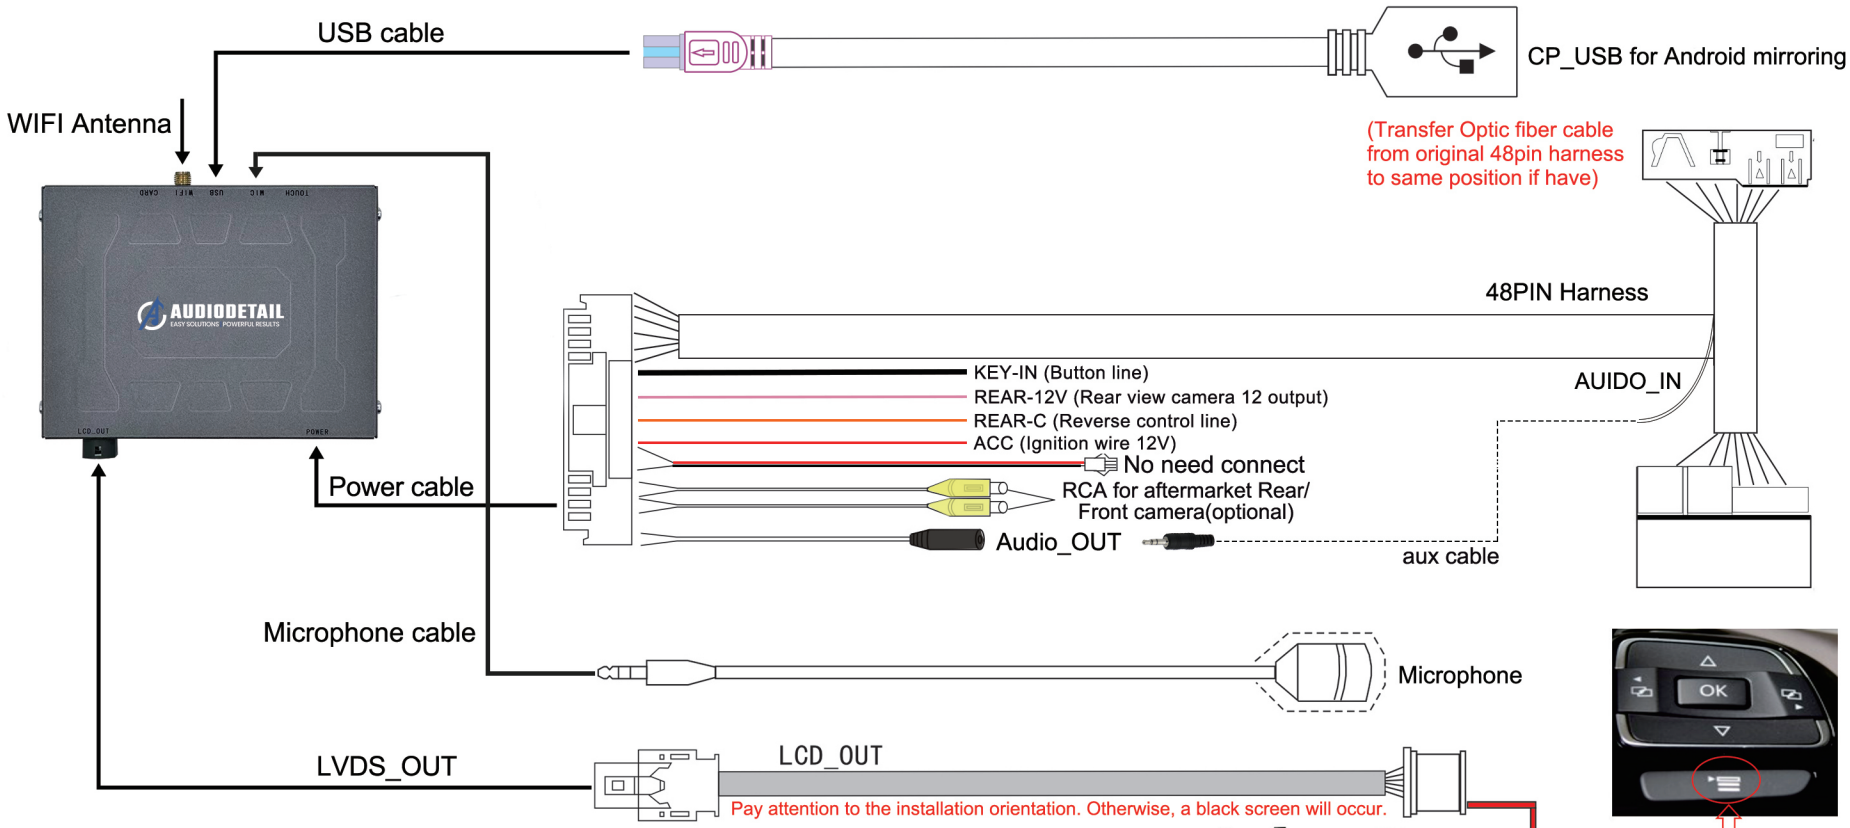


Dip Switch

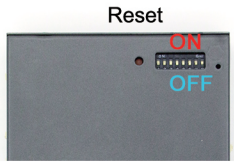


Dip switch	Status	Description
4	ON	Reverse Guidline OFF
	OFF	Reverse Guidline ON
8	ON	Original camera
	OFF	Aftermarket camera
1,2,3,5,6,7 no function, default OFF.		

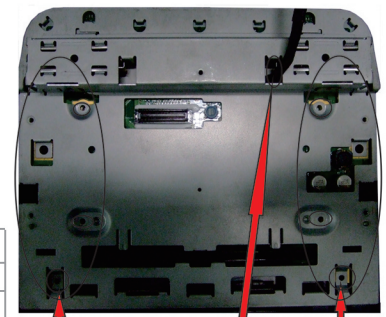

4. Install the screen switchboard behind the screen and insert the screen wiring and touch wiring. (Note that the bottom board should increase the insulation shim)

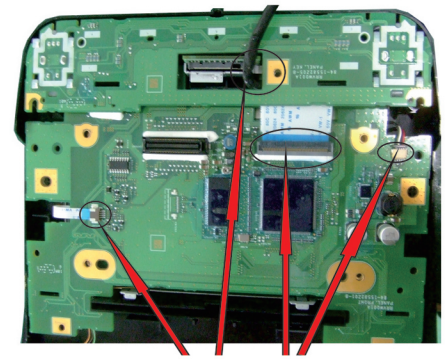

2. reset the keyboard and the back panel of the original car screen (pay attention to the line of LVDS)
3.Connect the line 60p 4P with the back light socket of the original car.

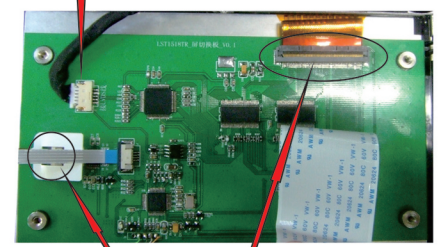

1. Cover the fixing bracket on the back panel and lock the screws (pay attention to the line of LVDS)

How to Connect Wireless Apple CarPlay


1,Long press switch button(different car with different switch button,check from installation diagram) to enter system main menu as below(BMW for example):



2, Then turn ON Wi-Fi from iphone's settings,you will find option of " WiFi-AP-**** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "Audio Detail", then according below steps get wireless connection

(Note: If "Audio Detail"shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iphone will show Use CarPlay request)

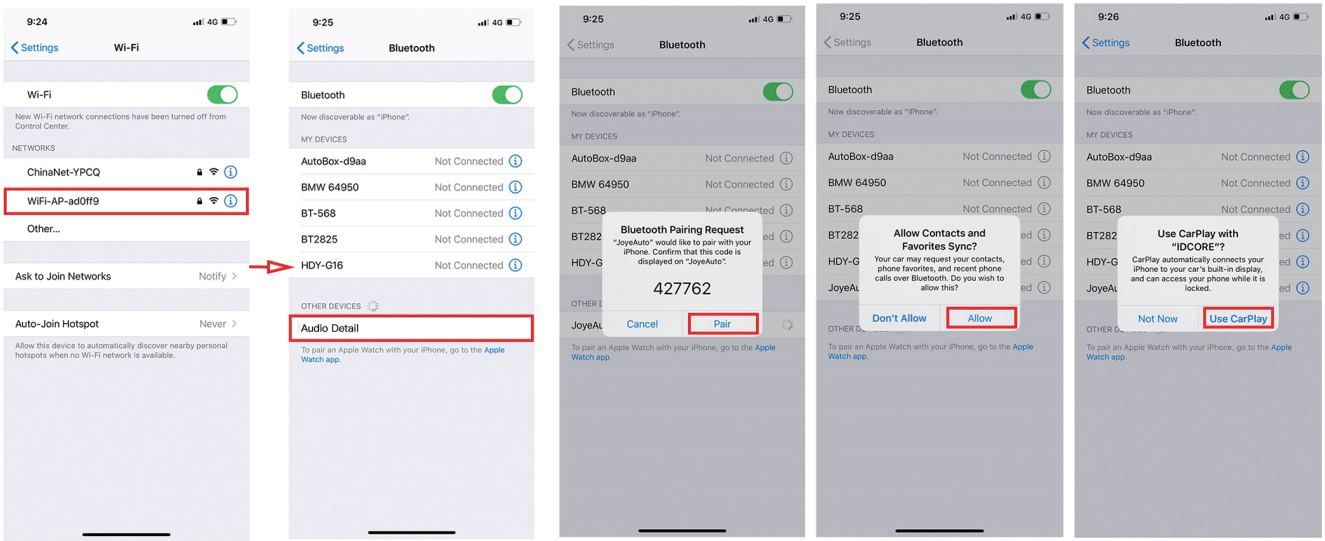

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

